



**UPLIFT 500**

[www.scan-go.eu](http://www.scan-go.eu)

*Made in Italy*



**USER MANUAL**

**SCAN&GO srl**

Via della Tecnica 34 A/B - 41051  
Castelnuovo Rangone (MO) - Italy  
Cell. +39 3924627285  
[info@scan-go.eu](mailto:info@scan-go.eu)

# Uplift500

## STEEL TELESCOPIC LIFTER

UPLIFT500 is a telescopic lifter made in painted steel, with manual lifter composed of 4 sections.

The best solution for using the laser scanner at maximum height of 5.00 mt.

### Combines stability with great sturdiness.

All metallic components (articulated parts, pressure knobs, leg braces, etc.) guarantee maximum durability and strength.

It is equipped with:

- double safety locking system by means of safety-bolt
- pressure knob
- heavy duty non-slip rubber feet
- Wind bracing kit



Uplift500  
can be used with Laser  
Scanner FARO FOCUS and  
LEICA BLK360 and RTC360



### **ATTENTION !!!!**

READ CAREFULLY THE PRESENT INSTRUCTION  
MANUAL BEFORE USING THE EQUIPMENT

IT IS STRICTLY FORBIDDEN THE USE OF THIS  
EQUIPMENT TO PEOPLE AGED LESS THAN 18


# DETAILS AND ACCESSORIES



<b>1</b>	5/8" CONNECTION
<b>2</b>	COLUMN
<b>3</b>	DOUBLE SAFETY LOCKING SYSTEM WITH SAFETY-BOLT AND PRESSURE KNOB
<b>4</b>	DOUBLE REINFORCING BRACES
<b>5</b>	ADJUSTABLE LEGS
<b>6</b>	RUBBER FEET COVER
<b>7</b>	BRAKING WHEELS (option)

## ACCESSORIES

<b>A</b>	SOFT BAG FOR THE ACCESSORIES	#
<b>B</b>	WIND BRACING KIT	#
<b>C</b>	BRAKING WHEELS	#
<b>D</b>	TRIBRACH	@
<b>E</b>	ADAPTER FOR TRIBRACH - 3/8"	@
<b>F</b>	ADAPTER FOR TRIBRACH - 5/8"	@
<b>G</b>	ADAPTER 1/4"	@
<b>H</b>	ADAPTER 3/8"	@

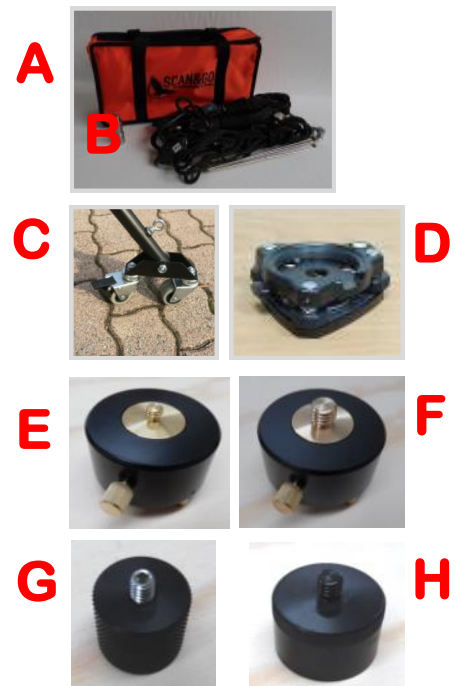

@ Item to be ordered separately

# Item included in the offer

# INSTRUCTIONS FOR INSTALLATION AND USE

## USING WITHOUT BREAKING WHEELS



For removing unscrew the wheels and put the rubber feet cover

## 1° STEP

### UPLIFT500 OPENING

Place the lifter on a solid and perfectly plane surface and proceed as follows:



Loosen the screw (A) + (B)

1



2

Bring down the gimbal until the connecting rods reach the desired position and tighten the screw. Use the adjustable feet to level the lifter.



Connect the wind bracing ropes to the top-head and the feet like shown in the photos

3



4


Install the device



It is strictly forbidden to exceed the maximum payload permitted, specified in the Technical Details

## 2° STEP:

To lift the UPLIFT500 proceed as follows:

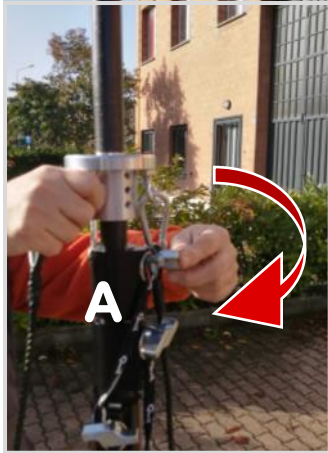


5

Loosen the thumb-screw of first extension (A)



6

Start lifting the first pole until is completely out

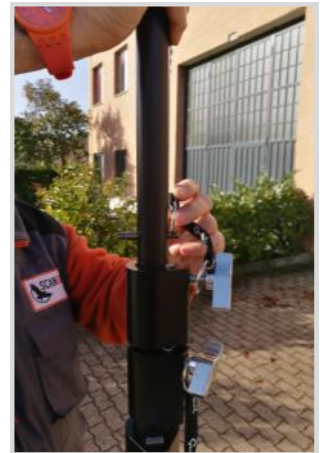

7

Insert the safety pin into the hole, lock the thumb-screw

Continue in the same way for all extensions till the complete opening of the pole



Complete the procedure by pulling the wind bracing ropes being careful not to overdo with the tension force



## 3° STEP:

### UPLIFT500 CLOSURE

Once the equipment has been used, proceed to the descent of each extension starting from the last that has been risen.

# SUMMARY TECHNICAL DATA

- Height when closed 178 cm
- Maximum Height opened 500 cm
- Basic diameter 170 cm
- Section 4
- Maximum load 10 kg
- Weight 16 kg
- Dimension when closed 178x20x20 cm

## REQUIREMENTS

### SAFETY MEASURES

- 1) The lifter must be placed in a solid and plane surface.
- 2) It is compulsory to secure the equipment with the provided straps that must be hooked to cement blocks or eventually to unmovable structures, if it is used in open spaces so that it is possible to protect it against the wind. Eventually, you can use some stabilizing masses to be positioned on the connecting rods of the tripod.
- 3) Do not put a ladder against the lifter.
- 4) Do not stand under the lifter when the load is up.
- 5) Do not move the elevator when it is lifted.
- 6) The lifter is not homologated for raising human beings.
- 7) Always, remember to lock the extension with the provided thumb-screw and with the safety catch .
- 8) In case the lifter is used in presence of other people, surround it with barriers.

### LIMITS OF USE

The two most important limits to be always checked are THE MAXIMUM PERMITTABLE LOAD as well as the WIND STRENGTH

\* \* MAXIMUM LOAD (see the technical data) refers to the weight that can be installed on the top of the mast to ensure a safe use. All loading conditions that exceed the limit will be considered as dangerous and will result in an immediate end of any form of warranty.

\* The STRENGTH OF THE WIND must be considered. If there is a strong wind, the manufacturer is not responsible of damages that may be caused by the inappropriate use of the equipment such as tipping etc.

### RISKS RELATED TO THE USE

The **two** main **sources of risk** are :

1. RISK OF FALLING of the equipment extended in height, resulting from the action of wind that has not been evaluated adequately.
2. CONTACT WITH ELECTRICAL CABLES, avoiding the risks is possible if the product is used properly by paying attention to the possible sources of danger present in the area. Please, remember that the electrical cables for high voltage, may define the electric discharge to the ground simply approaching and not necessarily touching the conductor.

It is therefore recommended to limit, as far as possible, the influence of the above risks, both for the operational staff and for strangers, in the following way:

\* *prohibit the transit and parking space surrounding the Uplift500*

\* *maintain the efficiency of the equipment*

**Prohibited the use of the platform in the installer mode different from the original configuration and delivery processes other than those provided by the manufacturer.**

**Prohibited the use of the platform in presence of functional anomalies and discrepancies in the rules of use and safety instructions given in this manual. If needed, please ask and wait for intervention of the staff in charge.**

**The use in the presence of functional anomalies and discrepancies in the terms of use and safety instructions described in this manual. If something happens, request and wait for assistance from the personnel.**

- The instructions, drawings and documentation contained in this document are of confidential technical nature, of property of the manufacturer and may not be reproduced in any manner, either wholly, or in part.
- The manufacturer reserves the right to make changes and improvements at any time, without any modification to this manual, and without prior notice.
- This document must be kept for future reference, until the scrapping of the machine and must be made available to the operators.
- If the unit is sold or leased, both the person who rents and the one who offer the service, is obliged to give the manual to the new owner or user.
- The original instructions are provided by the manufacturer in the Italian language.
- This document assumes that in the places where the equipment is sold, users respect the safety standards in force in the country.
- If the manual is lost or damaged, you can request a copy to the dealer, providing the data of the model, serial number and year of construction.
- Do not use the manual for any purpose other than the use and maintenance of the product

#### **CLEANING AND MAINTAINIANCE INSTRUCTIONS**

- It is recommended to dry it if it is used under the rain.
- Clean with mild soap and water, do not use chemical cleaners.

#### **INSTRUCTIONS FOR DEMOLITION**

The demolition of the pole must be done by qualified personnel in such activities and provided with adequate expertise. The disassembled components must be separated according to the nature of the materials they are made in compliance with the applicable laws of "different waste".



#### **WARRANTY**

- **The product warranty is of 12 months from the date of the Invoice.**
- SCAN & GO S.r.l. will support, at its discretion, the repairment and / or replacement of parts with manufacturing defects or damages during the warranty period, after having evaluated the fail-ure.
- The shipping cost of the damaged/defective parts during the warranty period, and the labour for its removal and replacement , are not included in the warranty, and may be approved only after prior written request and consequent authorization.
- The warranty does not cover cases of normal wear and tear, negligence in use, improper maintenance and improper use.
- The warranty lapses in case the 'machine' is equipped with non-original accessories or parts.
- In no event SCAN & GO srl will cover the expenses, for loss or damage of any kind resulting from the use more or less correct or from the partial or total malfunctioning of the equipment.
- The goods travel at the risk of the recipient, any damage incurred during the shipment must be claimed at the delivery by the courier in charge.

The manufacturer is deemed non-responsible in the case of:

- 1) inappropriate use of the UPLIFT
- 2) use of the equipment, against to any other applicable national regulations;
- 3) serious lack of attention in the maintenance;
- 4) interventions or unauthorized modifications;
- 5) use of non-original parts or replacing parts;
- 6) failure to comply, in whole or in part, of the instructions;
- 7) exceptional events.



NEW surveying technology & solutions