 





2 sec.



min

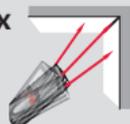

 
2 sec.

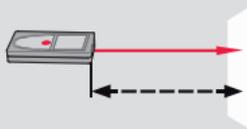

1x



Area

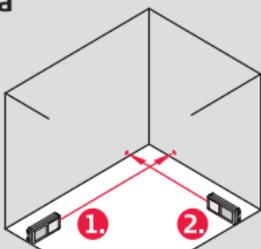

Transfer value from main line by holding




└ 2 sec. ┘



2x



Volume

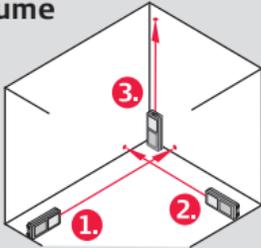

Transfer value from main line by holding



└ 2 sec. ┘




2 sec.



Quick Start

Leica DISTO™ X1

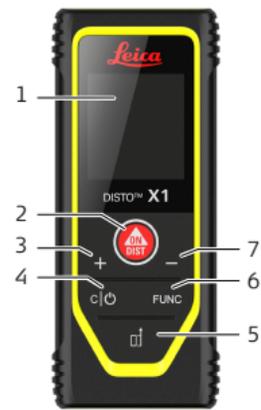

- 1 Display
- 2 ON/Measure
- 3 Add
- 4 Clear/OFF
- 5 Measuring Reference
- 6 Functions/Settings
- 7 Subtract

- when it has to be right



FUNC

2 sec.

Settings

FUNC	2 sec.	1.1	07 12	0.000 m 0.0000 m 0.000 in	0.00 ft 0'00" 1/32 0 in 1/32
FUNC / 		2.1	BLUET		
FUNC / 		3.1	NFC		
FUNC / 		4.1	BEEP		

  Change settings in submenu / turn function ON/OFF



www.disto.com

User Manual:



ON



OFF

2 sec.

